 


VALARA



| | | | | | | | | | |
|-----|---------------------------|-----|------------------------------|-----|--------------------------|-----|---------------------------|-----|----------------------|
| ENG | INSTALLATION INSTRUCTIONS | ITA | ISTRUZIONI DI INSTALLAZIONE | NLD | INSTALLATIE INSTRUCTIES | DAN | INSTALLATIONSVEJLEDNING | HUN | TELEPÍTÉSI ÚTMUTATÓ |
| DEU | INSTALLATIONSANLEITUNG | POL | INSTRUKCJE MONTAŻU | RUS | Инструкции по установке | RON | INSTRUCȚIUNI DE INSTALARE | CHI | 安装说明 |
| FRA | INSTRUCTIONS DE MONTAGE | SPA | INSTRUCCIONES DE INSTALACIÓN | POR | INSTRUÇÕES DE INSTALAÇÃO | SWE | INSTALLATIONSANVISNING | UKR | Інструкції з монтажу |
| SRP | UPUTSTVA ZA INSTALACIJU | AR | تعليمات التركيب | | | | | | |



IP
65

IK
06

Control gear must be SELV/PELV!

$U_{out\ max}=120V$



12-24VDC




ALL THE TIGHTENING TORQUES VALUES ARE GIVEN FOR ASSEMBLIES WITHOUT THE ADDITION OF A GREASE DECREASING FRICTION.

PARTS LIST




INSTALLATION STEPS


1

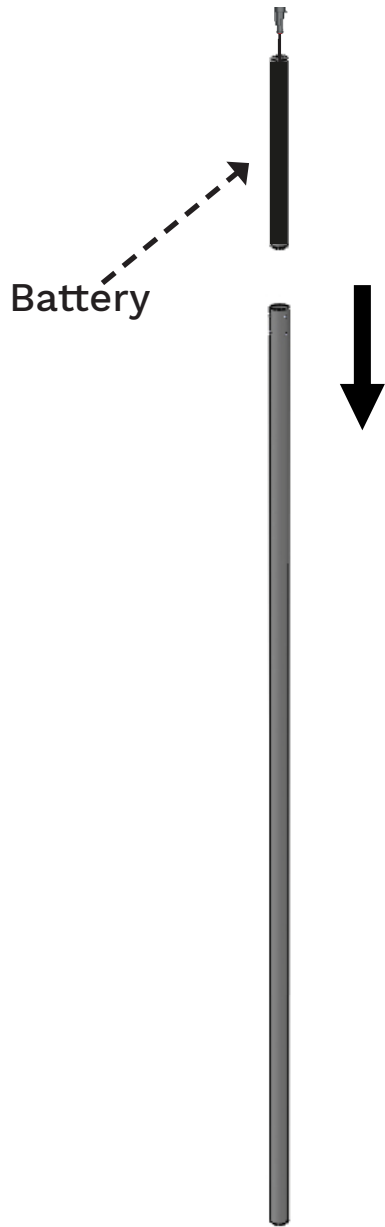


2

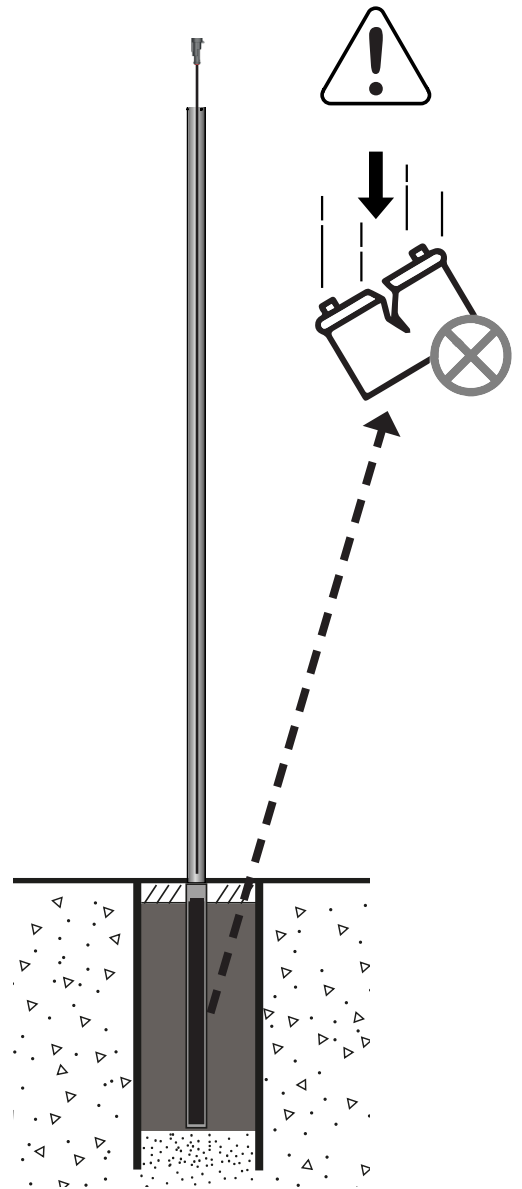


3

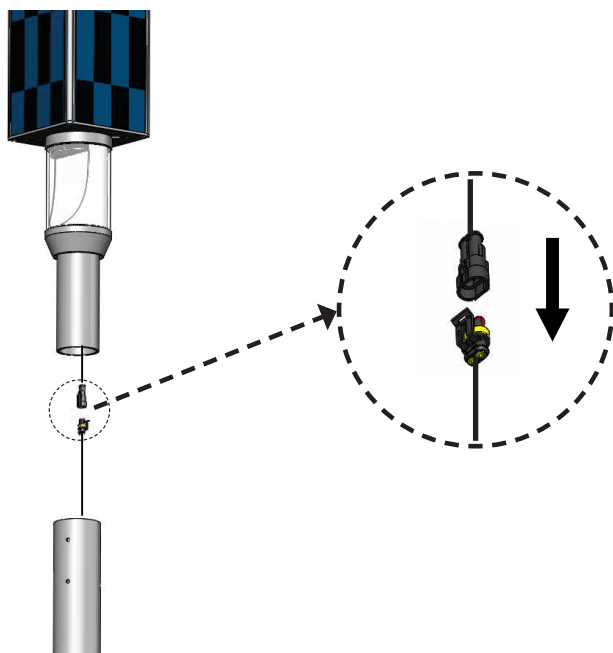


4

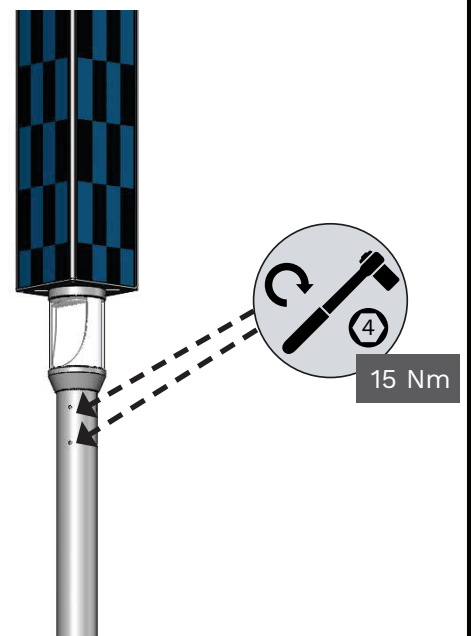


MOUNTING OPTION 1 - PIPE FOUNDATION

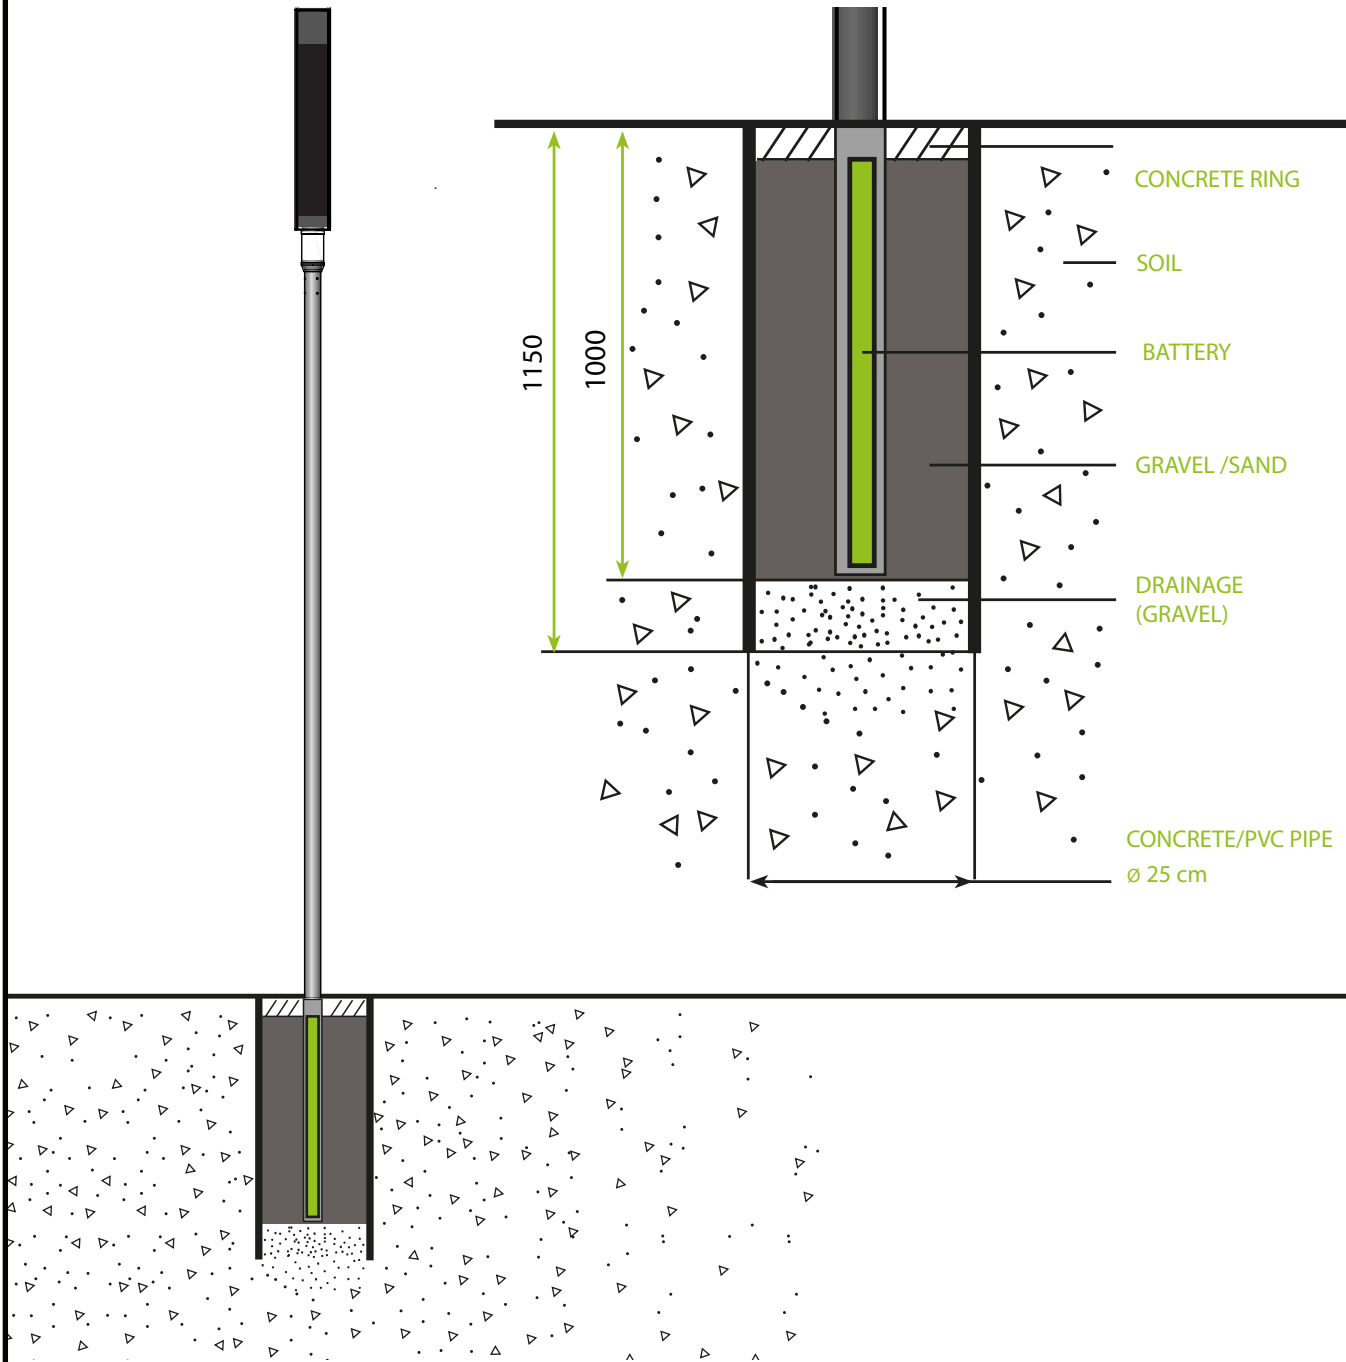

MOUNTING OPTION 2 - ANCHOR BASE

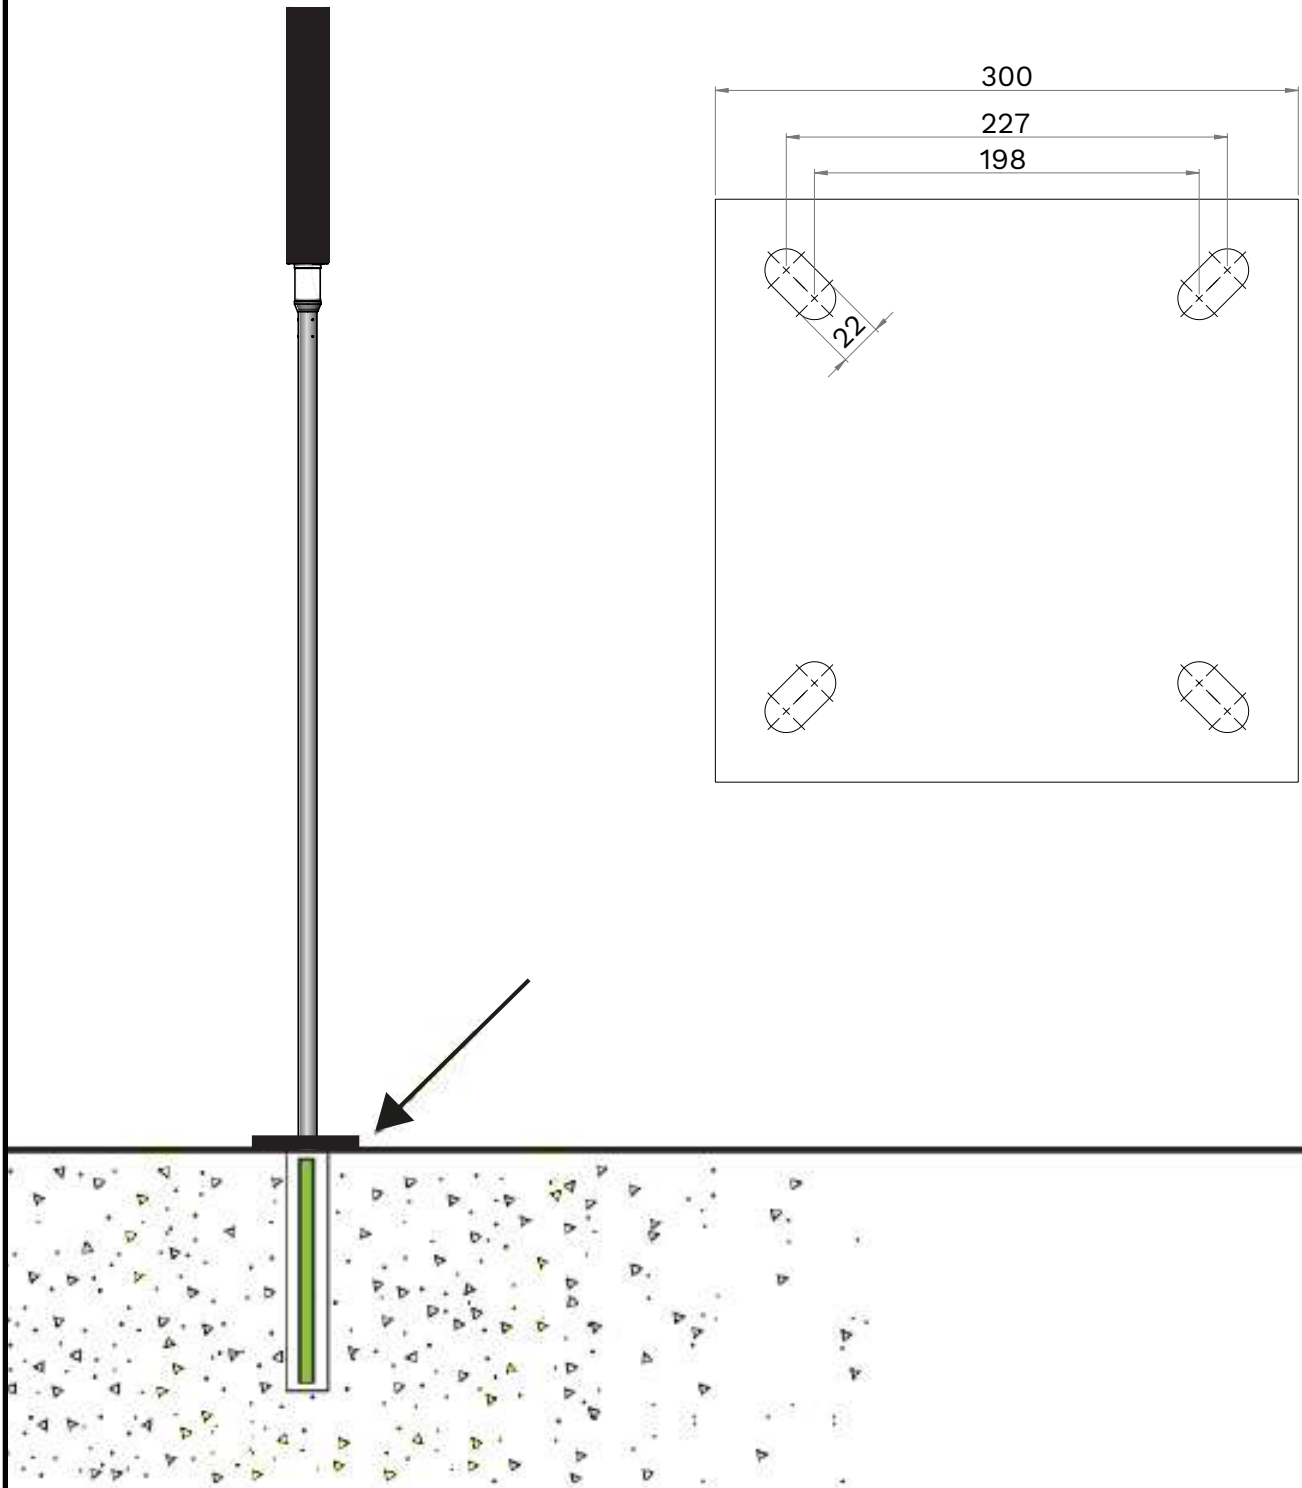

MOUNTING OPTION 3 - GROUND SCREW FOUNDATION

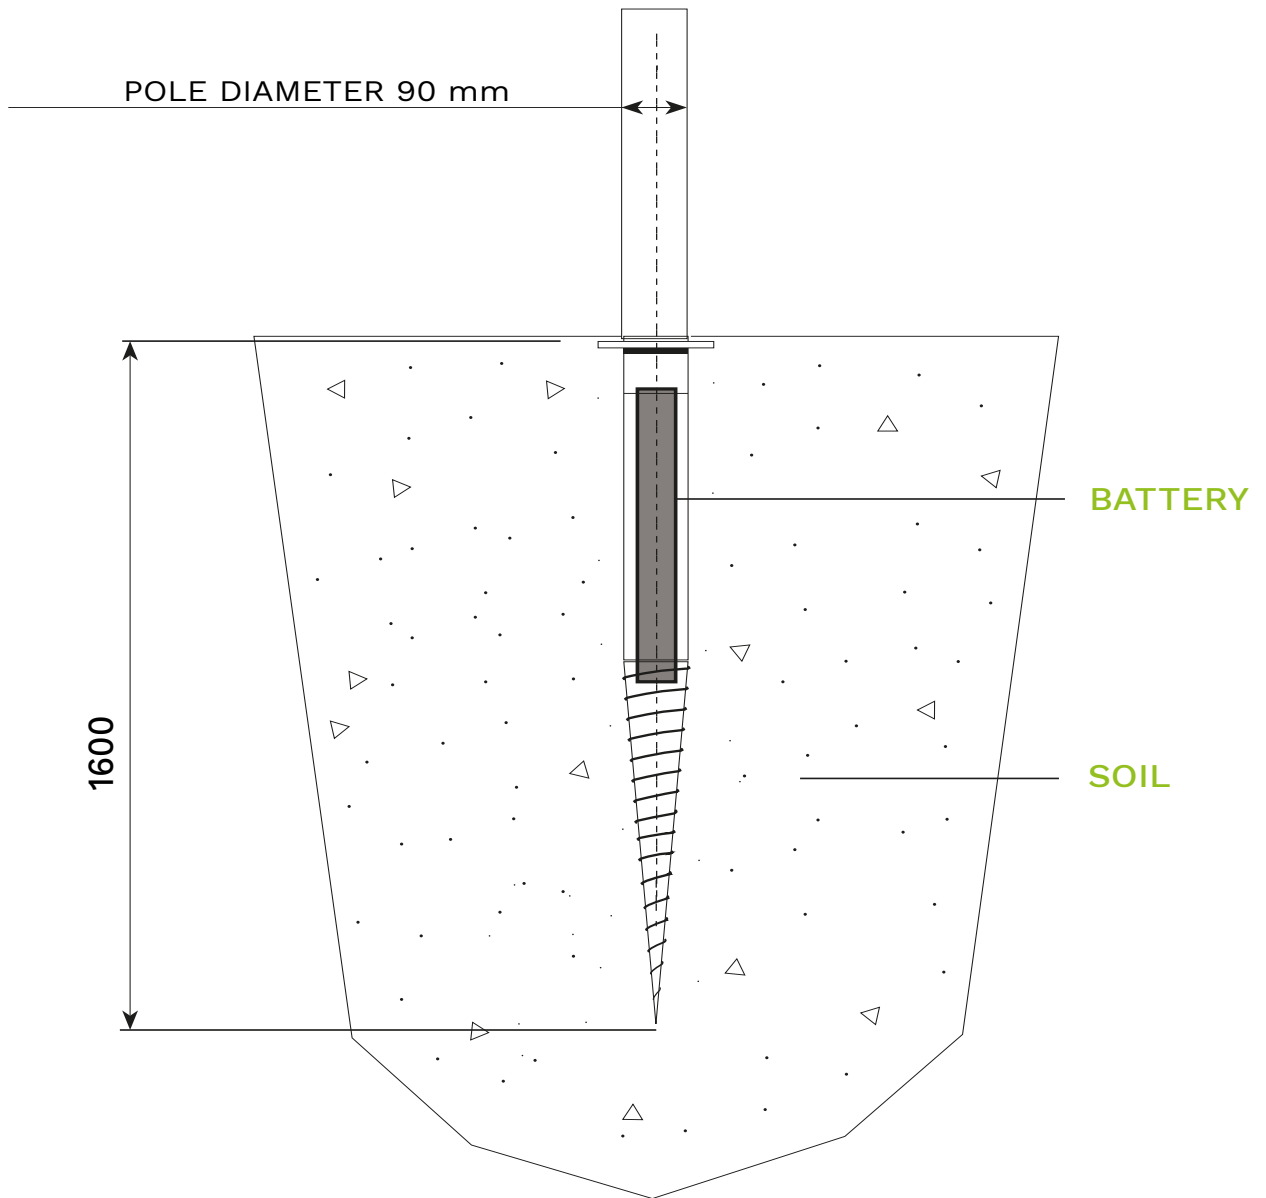

Please consult your Schröder expert before installation!